


INSTALLATION KIT PART NUMBERS:

- EJ5301-41.
- EJ5301-42.

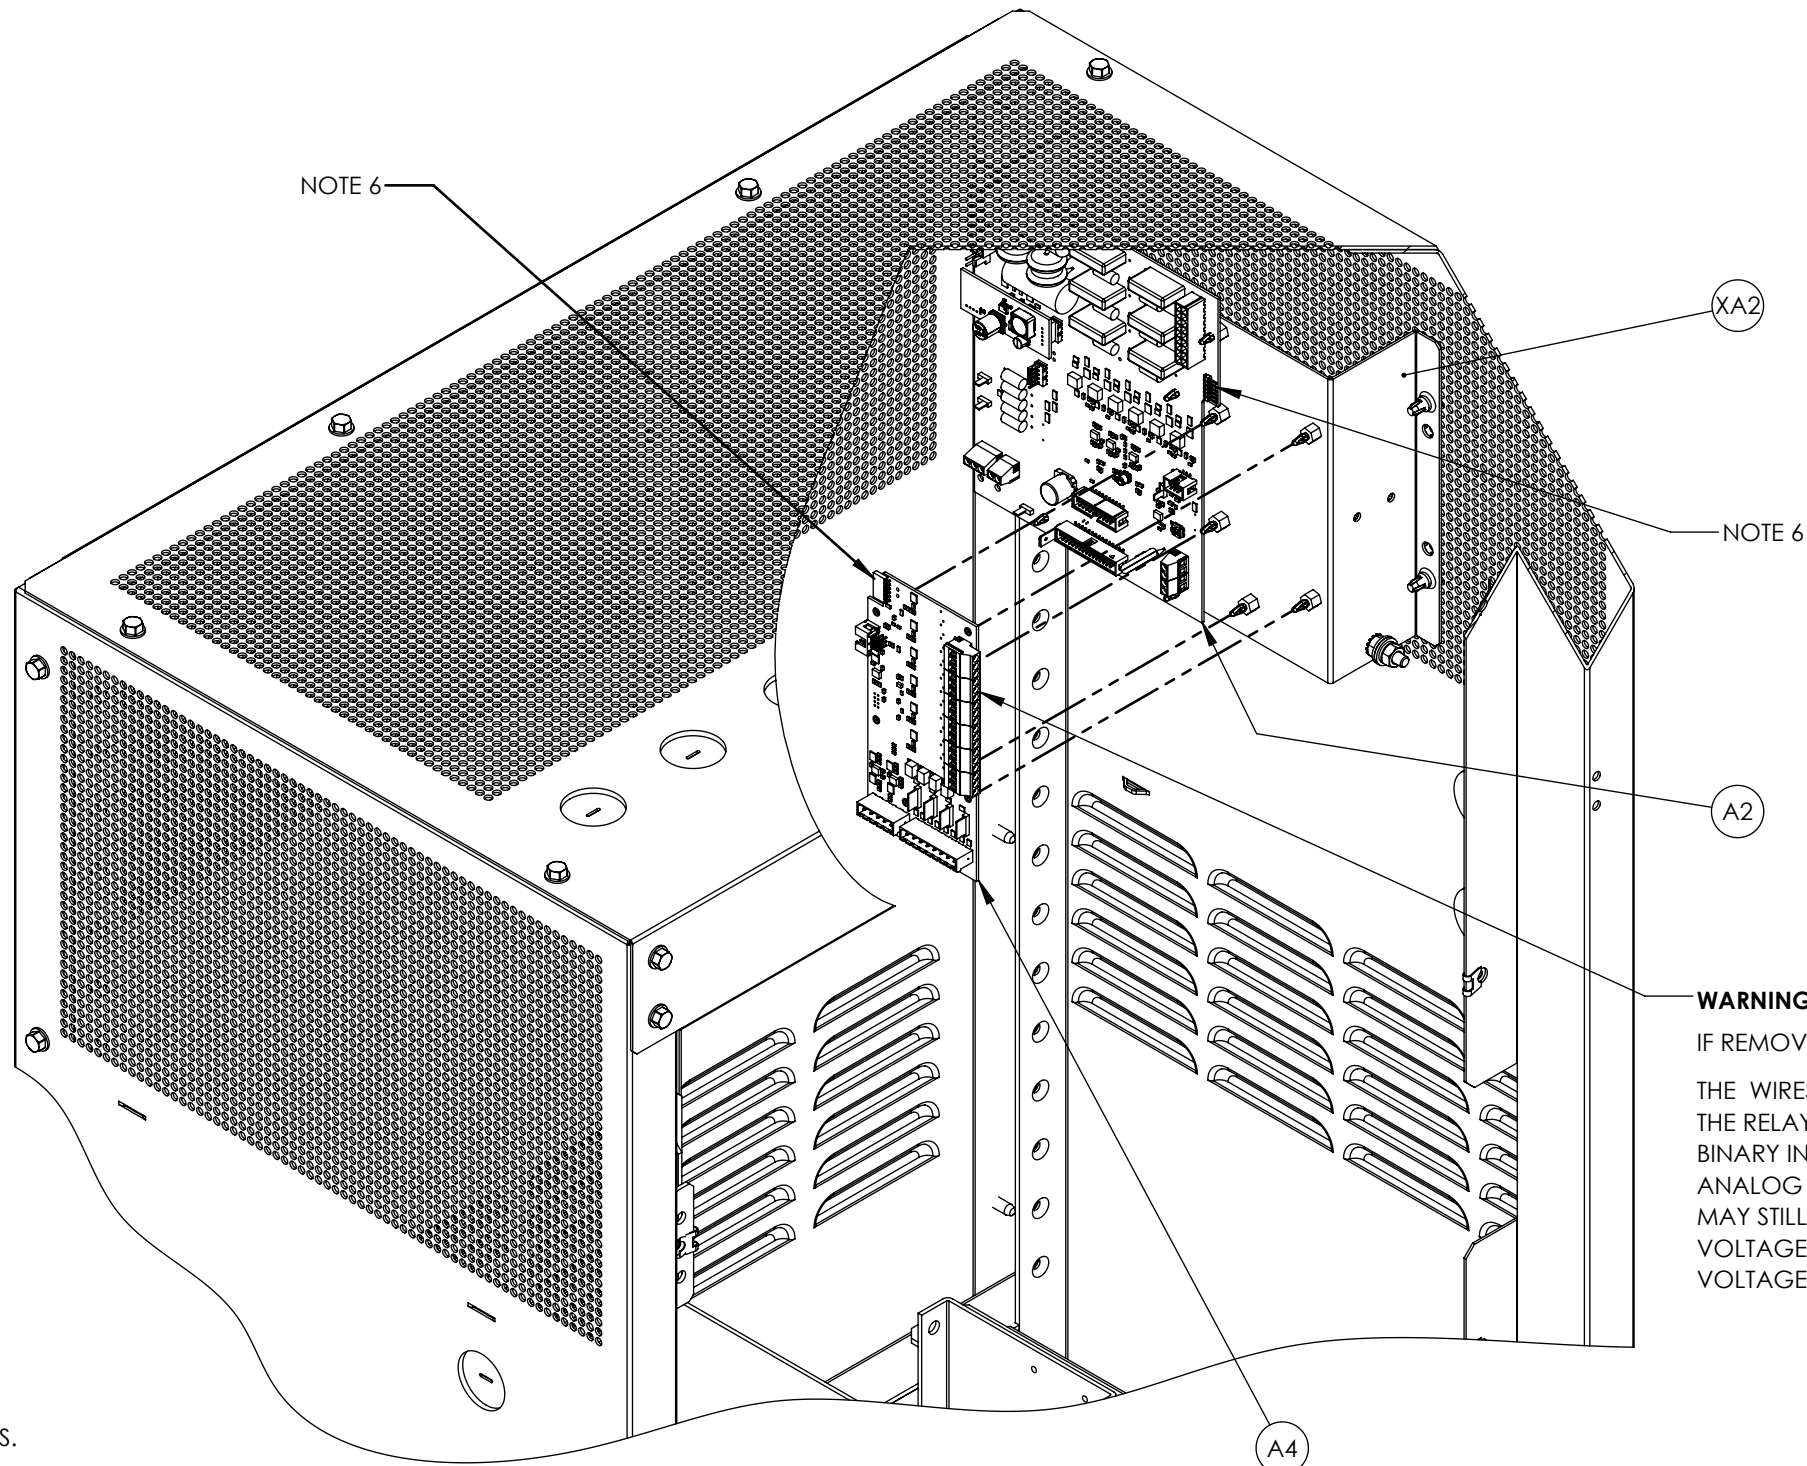

NEW INSTALLATION INSTRUCTIONS:

1. TURN OFF (OPEN) AC INPUT CIRCUIT BREAKER (CB1), AND DC OUTPUT CIRCUIT BREAKER (CB2).
2. ALLOW INTERNAL VOLTAGES TO DISSIPATE.
3. OPEN DOOR PANEL. CAREFULLY REMOVE PLEXIGLAS SHIELDS.
4. USING A VOLTMETER, VERIFY ALL POTENTIAL VOLTAGES ARE AT "0" ON LINE SIDE OF DC BREAKER.
5. LOCATE (XA2) MOUNTING BRACKET AS SHOWN IN ATevo MOUNTING VIEWS.
6. ALIGN HEADER SOCKET AT TOP LEFT OF (A4) AUXILIARY I/O BOARD WITH HEADER PINS ON (A2) POWER BOARD.
7. PUSH (A4) AUX I/O BOARD ONTO HEADER PINS OF (A2) POWER BOARD AND ALIGN 5 MOUNTING HOLES WITH STANDOFFS ON (XA2).
8. PUSH DOWN ON (A4) TO FULLY ENGAGE STANDOFFS.
9. INSTALL USER ALARM WIRING TO TB4 AS NEEDED.
10. REPLACE SAFETY SHIELD, CLOSE FRONT PANEL DOOR, AND RESTART ATevo.

WARNING:
IF REMOVING EXISTING (A4), THE WIRES CONNECTED TO THE RELAY OUTPUTS (A4-TB4), BINARY INPUTS (A4-TB1), AND ANALOG INPUTS (A4-TB3) MAY STILL HAVE WETTING VOLTAGES OR SIGNAL VOLTAGES PRESENT.

MOUNTING VIEW
STYLE - 5030 SHOWN
ALSO APPLICABLE TO STYLE - 163 & 198

REV.	DRN BY	CHK BY	APP BY	DATE	DRN BY	DATE:	TITLE ATevo Field Installation Instructions INSTR,AUX.I/O.PCB,EV3,5030/163/198
				5/25/2023	MS	5/25/2023	
DESCRIPTION Initial Release					CHK BY	DATE:	
					KJB	5/25/2023	
					APP BY	DATE:	
					JK	7/6/2023	
PROPRIETARY AND CONFIDENTIAL NOTICE ANY REPRODUCTION, PARTIAL OR AS A WHOLE OF THIS DOCUMENT WITHOUT THE WRITTEN PERMISSION OF HINDLE POWER, INC IS STRICTLY PROHIBITED.				UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS FOLLOW THE ANSI SYSTEM IPS (INCHES-POUNDS & SECONDS) TOLERANCES ARE: FRAC. ±1/64, DEC. ±0.15, ANG ±.25°			
						SCALE	DWG No
				B		1:4	JD5025-54
						REV	SHEET
						0	1 OF 1