



INDICATOR LIGHTS (LEDs):

- |                                     |                                  |
|-------------------------------------|----------------------------------|
| DS01 - GREEN - AC ON                | DS10 - RED - LOW LEVEL DETECT    |
| DS02 - RED - DC VOLTS               | DS11 - RED - (METER DISPLAY)     |
| DS03 - RED - DC AMPERES             | DS12 - RED - (METER DISPLAY)     |
| DS04 - RED - EQUALIZE HRS REMAINING | DS13 - RED - HIGH DC VOLTAGE     |
| DS05 - GREEN - FLOAT                | DS14 - RED - LOW DC VOLTAGE      |
| DS06 - AMBER - EQUALIZE             | DS15 - RED - DC OUTPUT FAILURE   |
| DS07 - AMBER - MANUAL TIMER         | DS16 - RED - AC INPUT FAILURE    |
| DS08 - AMBER - MANUAL EQUALIZE      | DS17 - RED - POS(+) GROUND FAULT |
| DS09 - AMBER - AUTO EQUALIZE TIMER  | DS18 - RED - NEG(-) GROUND FAULT |

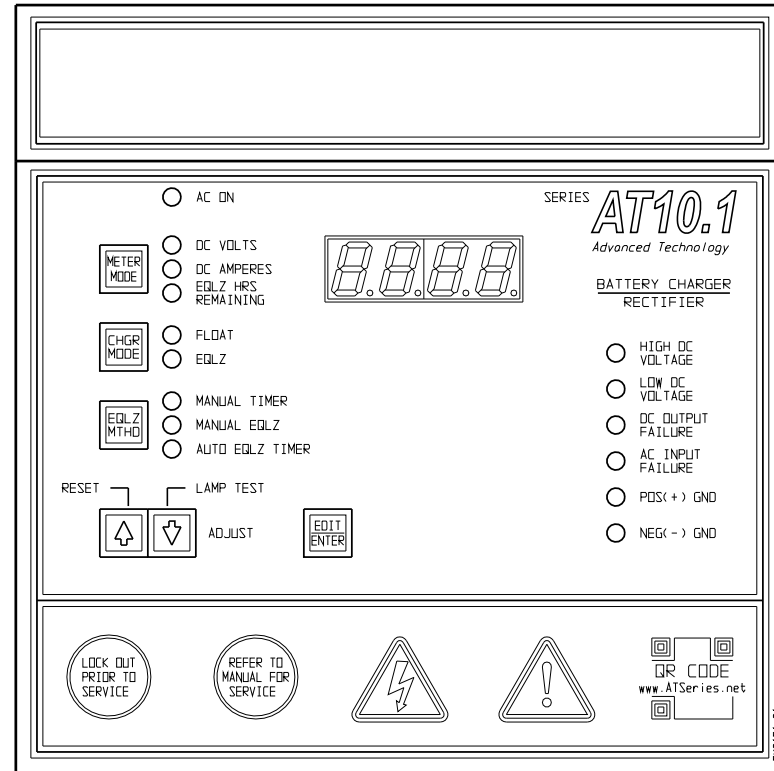

CONTROL PANEL  
(p/n FK0151-01)

NOTE: UNLESS OTHERWISE SPECIFIED, ALL ALARM TERMINAL BLOCKS (TB3/TB4/TB8) ARE SOLDERLESS COMPRESSION TERMINALS, ACCEPTING #22-14 AWG WIRE. ALL ALARM CONTACTS SHOWN IN NON-ALARM STATE, WITH CHARGER ENERGIZED AND ALARM RELAYS ENERGIZED (FAIL SAFE). ALL ALARM CONTACTS WILL CHANGE STATE WHEN CHARGER IS POWERED DOWN. CONTACT RATING IS 0.5A @ 125VAC/VDC RESISTIVE.

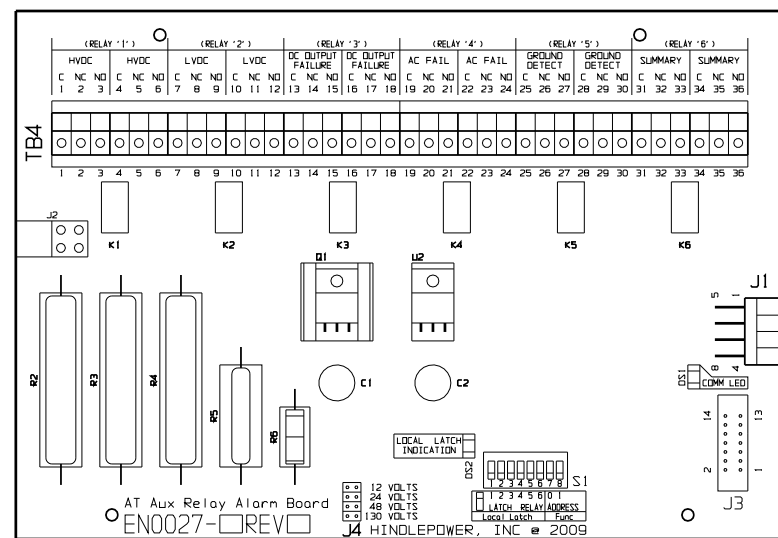


AUXILIARY ALARM RELAY PC BOARD (A5)

A5-J1 CONNECTED TO  
A1-J2 VIA EH5045-0#  
8-PIN SERIAL CABLE


OTHER CONTROLS:  
RA1 - LOW LEVEL  
DETECT ADJUST  
RA2 - GROUND FAULT  
BALANCE  
RA3 - GROUND FAULT  
SENSITIVITY

NON-USER ACCESSED JUMPERS:  
J3 - OLD A5 RIBBON CONNECTOR  
J12 - BOARD PROGRAMMING  
J14 - OLD FORCED LOAD SHARING  
J15 - MANUFACTURING TEST  
J16 - OLD INTERNAL TEMP

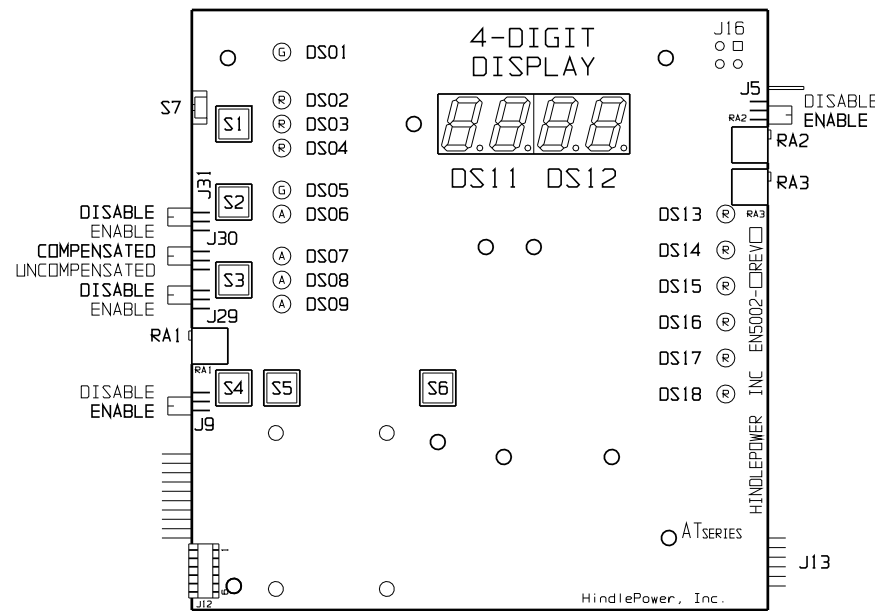

MAIN CONTROL PC BOARD (A1)

FRONT VIEW - FACING CHARGER DOOR WHEN INSTALLED

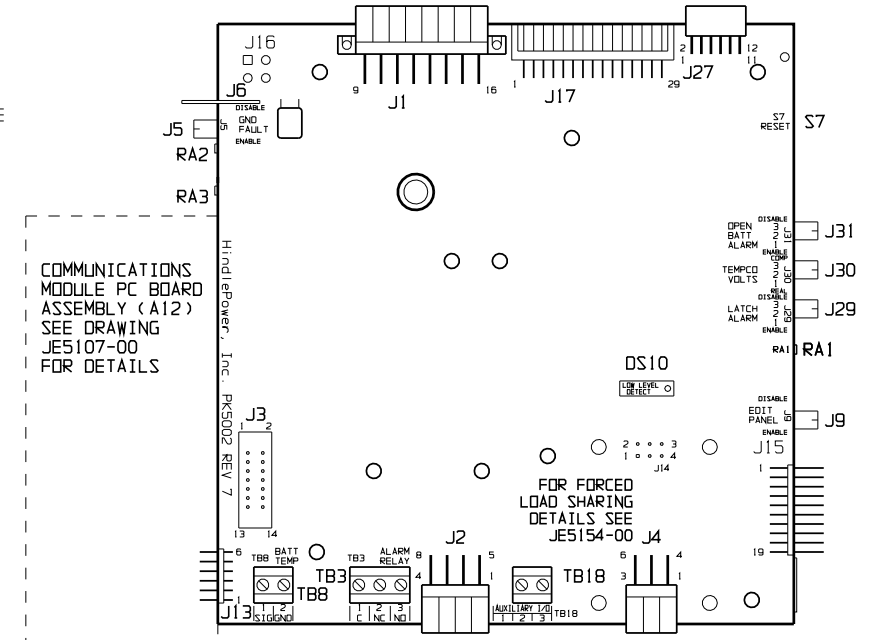

MAIN CONTROL PC BOARD (A1)

BACK VIEW - FACING CHARGER COMPONENTS WHEN INSTALLED

USER JUMPERS:

- J1 - MAINFRAME SIGNAL HARNESS
- J2 - AUX ALARM RELAY BOARD (A5) SERIAL CONNECTOR
- J4 - FORCED LOAD SHARING CABLE INTERCONNECTOR
- J5 - GROUND FAULT ENABLE/DISABLE
- J6 - EARTH GROUND CONNECTOR
- J9 - FRONT PANEL ENABLE/DISABLE (LOCKOUT)
- J13 - COMMUNICATIONS PC BOARD (A12) INTERCONNECTOR
- J17 - HD GATE DRIVER PC BOARD (A11) INTERCONNECTOR
- J27 - not used (3PH GATE DRIVER INTERCONNECTOR)
- J29 - LATCHING ALARMS ENABLE/DISABLE SELECTOR
- J30 - TEMPCO VOLTAGES (COMPENSATED/UNCOMP) SELECTOR
- J31 - BATTERY OPEN ALARM ENABLE/DISABLE SELECTOR

SWITCHES:

- S1 - METER MODE
- S2 - CHARGER MODE
- S3 - EQUALIZE METHOD
- S4 - Δ ADJUST
- S5 - ∇ ADJUST
- S6 - EDIT / ENTER
- S7 - PROCESSOR MANUAL RESET

TERMINAL BLOCKS:

- TB3 - SUMMARY ALARM RELAY CONTACTS
- TB4 - AUX ALARM RELAY CONTACTS
- TB8 - OPT TEMPCO PROBE (A10) CONN
- TB18 - REM SHUTDOWN INTERFACE

7	27440	021720	THIRD ANGLE PROJECTION	TITLE AT10.1 SERIES BATTERY CHARGER (GROUP I) INSTRUMENT PANEL / PC BOARD DETAIL (OPTIONAL)
6	25008	071415		
5	23710	051613	DRAWN BY MCR 022003	DRAWING No JE5030-19 REV 7 B
4	23006	020812		
3	21922	120209	UNLESS OTHERWISE NOTED DIMENSIONS ARE IN INCHES. TOLERANCES ARE:	SCALE NTS PART No JE5030-19 SHEET 1 OF 1
REV	ECN No	DATE		